


DuraVent - DuraLiner: Masonry Thimble L402 Installation Instruction Addendum

DuraLiner

Masonry Thimble Installation: Connect slip connector to Tee Branch with the pre-formed buttons. Slide masonry thimble outer sleeve onto slip connector. Then, slide the black trim plate onto the masonry thimble outer sleeve up to bead and attach black trim plate to masonry surface using screws.

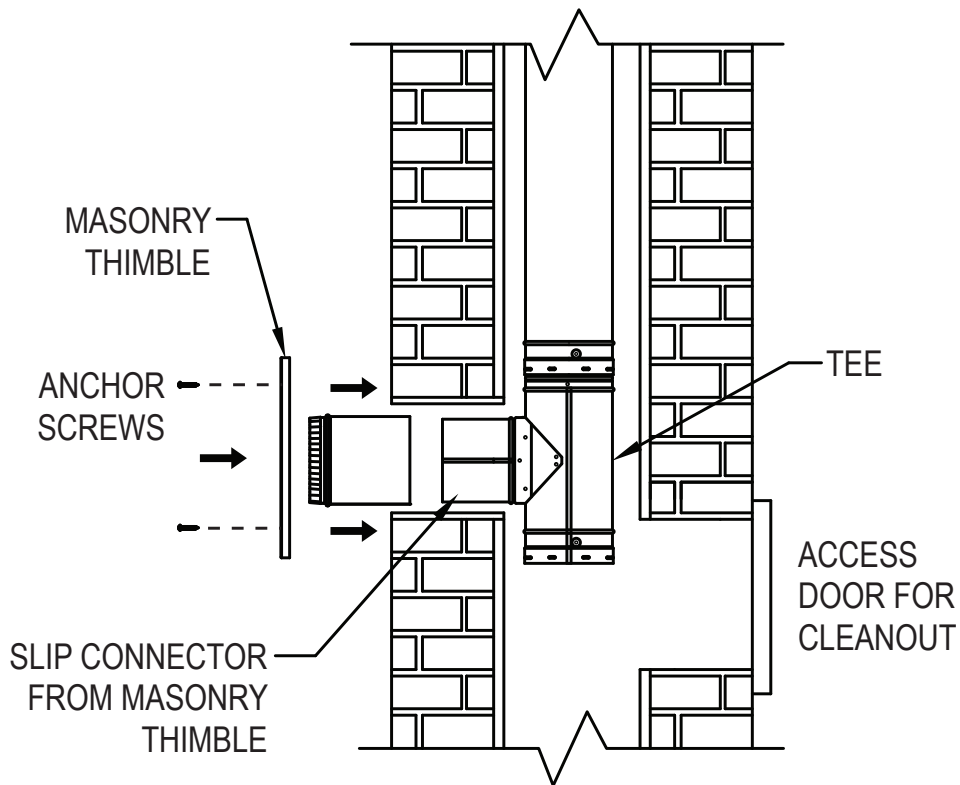

DuraVent[®]

c **UL** us
LISTED
MH14420

L4020 03/2018