

# DURATECH PREMIUM<sup>®</sup> DTP

Factory-built 650°C  
Chimney 6", 7", & 8" dia.

## CONTENTS

RECOMMENDATIONS AND APPLICATIONS.....	2
KEEP YOUR CHIMNEY CLEAN, SIZING CHART.....	3
GENERAL INSTALLATION NOTES.....	4-5
INTERIOR STRAIGHT INSTALLATION - SINGLE FLOOR.....	6-7
INTERIOR STRAIGHT INSTALLATION - MULTIPLE FLOOR.....	8-9
INTERIOR INSTALLATION WITH CATHEDRAL CEILING.....	10-11
OFFSET INSTALLATION.....	12-14
EXTERIOR INSTALLATION.....	15-17
SPECIALIZED COMPONENTS.....	19
WARRANTY.....	21

### WARNING

A MAJOR CAUSE OF CHIMNEY-RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS CHIMNEY BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.

## INSTALLATION

## AND

## OPERATION

## INSTRUCTIONS

Listed: Warnock Hersey 9651

Standard: ULC S629-M87

**Read these instructions and keep them for future reference**



We recommend that our woodburning hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute<sup>®</sup> (NFI) as NFI Woodburning Specialists or who are certified in Canada by Wood Energy Technical Training (WETT).



# DuraVent<sup>®</sup>

877 Cotting Court, Vacaville, CA 95688  
800-835-4429; [www.DuraVent.com](http://www.DuraVent.com)

## RECOMMENDATIONS

### Clearance

The clearances stated in this guide are minimum requirements: if more space is available, use it. Minimum clearances mean leaving unobstructed air space.

### Inspection

Contact local building or fire officials about restrictions, installation inspections and permits that may be required in your area.

### Replacement Parts

If a component of your chimney system is damaged it must be replaced by an identical one from DuraVent.

#### WARNING

##### CREOSOTE FORMATION AND NEED FOR REMOVAL

When wood is burned slowly, it produces tar and other organic vapors, which when combined with expelled moisture form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining. When ignited this creosote makes an extremely hot fire. ...A creosote deposit just 1/8" (3 mm) thick is enough to cause a chimney fire.

##### COAL:

Some coals contain large quantities of sulphur (up to 7%). When coal is burned, sulphur and coal ashes are deposited in the chimney flue. This deposit combines with moisture to form a highly corrosive acid (sulphuric acid). In order to protect your chimney, we recommend that you:

1. Burn only low sulphur coals (less than 1% sulphur).
2. Have your chimney cleaned within 48 hours of shutting down your stove at the end of the heating season. Be certain that all the soot is removed. Wipe the chimney flue using a strong solution of baking soda and water. This can be done by wrapping a rag around a chimney cleaning brush, dipping it into the baking soda-water solution then passing it through the chimney three or four times.

## APPLICATIONS

### WOOD AND COAL STOVES

If you are planning to install a wood stove, we recommend that you:

1. Choose a stove that bears the label of a testing laboratory (such as ULC, CSA, WH, UL, or ICBO).
2. Choose the right size stove. Do not buy one larger than you need.
3. Connect only one appliance to a chimney.
4. Never overfire your stove. If any part of the stove or stove pipe is glowing red, then you are overfiring. Immediately close the stove's dampers until the system cools. The high temperature caused by overfiring can permanently damage the stove and stove pipe and may overheat nearby combustible walls and furniture.
5. Install the stove and stove pipe as described in the installation instructions accompanying the stove. Be certain to maintain the required clearances to combustible construction.
6. Keep your flue gases between 300°F and 500°F. This will maximize efficiency while minimizing condensation and creosote formation. Do not fill your stove with wood and allow it to smolder for 8 to 10 hours. This condition produces large amounts of creosote in the chimney.



#### WARNING

**In Case of Fire: If a flue fire occurs, close all appliance draft openings, and call your Fire Department. Do not use the chimney again, until it has been inspected for possible damage.**

# KEEP YOUR CHIMNEY CLEAN


## CHIMNEY OPERATION AND MAINTENANCE

Wood stoves can quickly create large deposits of creosote in the chimney. Some wood stoves can create enough creosote in two weeks to cause a chimney fire. When using a wood stove, we recommend that you:

1. Initially, inspect the chimney system weekly. You will learn how often it will be necessary to clean your chimney.
2. The chimney should be inspected at least once every 2 months during the heating season to determine if a creosote or soot build-up has occurred. If creosote or soot has accumulated, it should be removed to reduce the risk of chimney fire.
3. Have your chimney cleaned by a qualified chimney sweep. If you want to clean your chimney yourself: clean your chimney using plastic or stainless steel brushes. Do not use a brush that will scratch the stainless steel interior of your chimney.
4. Do not expect chemical chimney cleaners to keep your chimney clean. Their use does not negate the necessity of periodically inspecting and cleaning your chimney.
5. Do not burn sea driftwood, treated wood, or garbage. These combustibles are highly corrosive to all types of stainless steel.

## CAP REMOVAL FOR MAINTENANCE

To remove cap, unscrew the collar screw to untighten the collar. Pull on the cap to remove it from the chimney. To put the cap back in place, slide it over the chimney and then tighten the collar using the collar screw.

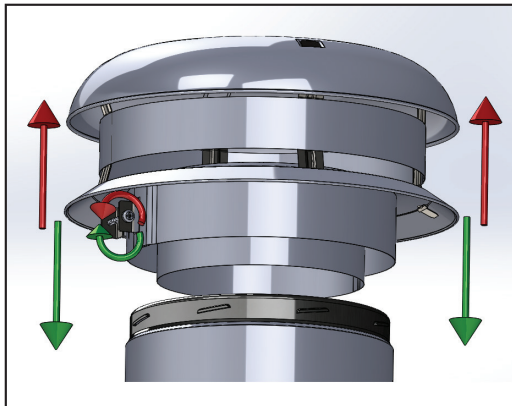

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.


# SIZING CHART

CHIMNEY-SIZE	6"	7"	8"
OUTSIDE-DIAMETER	10"	11"	12"
<b>FRAMING-DIMENSION-REQUIRED</b>			
Reduced Clearance Support (RCS)	12 1/8"	13 1/8"	14 1/8"
Cathedral Support (CS24)	14-3/8"	14-3/8"	14-3/8"
Finishing Support (SFC)	14-3/8"	14-3/8"	14-3/8"
Firestop (FS)	14"	15"	16"
Wall Thimble (WTI)	14"	15"	16"
<b>MAXIMUM HEIGHT / LOADBEARING CAPACITY **</b>			
Wall Support (URES), (ATSC) & (ATS)	30'	28'	26'
Roof Support (RS)	20'	18'	16'
Reduced Clearance Support (RCS)	30'	28'	26'
Cathedral Support (CS24)	30'	28'	26'
Finishing Support (SFC)	30'	28'	26'
Offset/Wall Support (URES)	24'	22'	20'
Insulated Tee (T) *	30'	28'	26'

Table 1

- \* When installed on a concrete footing.
- \*\* NOTE: If greater height is required, use additional roof supports at intervals not exceeding 30'

## ROOF OPENING CHART

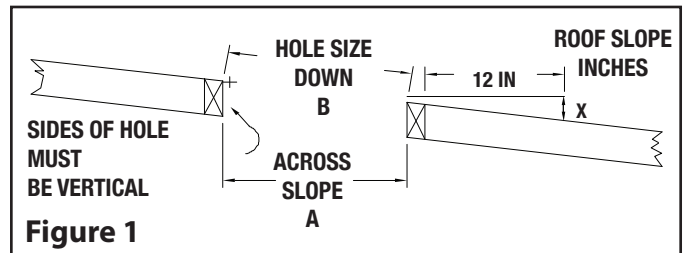

CHIMNEY SIZE	6"		7"		8"	
	ROOF HOLE SIZE					
ROOF SLOPE (X/12)	A	B	A	B	A	B
0	14	14	15	15	16	16
2/12	14	14 1/4	15	15 1/4	16	16 1/4
4/12	14	14 7/8	15	15 7/8	16	16 7/8
6/12	14	15 3/4	15	16 3/4	16	17 7/8
8/12	14	16 7/8	15	18 1/8	16	19 1/4
10/12	14	18 1/4	15	19 9/16	16	20 7/8
12/12	14	19 7/8	15	21 1/4	16	22 5/8

Table 2 - Refer to Figure 1

# 1

## GENERAL INSTALLATION NOTES

### INSTALLATION NOTES

1. The chimney is intended for use with solid, liquid, and gaseous natural /atmospheric vented burning appliances. Not for use on forced draft or positive pressure appliances.  
Allowable flue gas temperature:  
Maximum continuous 650°C (1200° F)  
Brief forced firing 760°C (1400°F)  
Tested to 1150°C (2100°F) - 30 minutes
2. The maximum height of chimney supported by the various security supports are outlined on page 3.
3. The supports described in this booklet should only be used with DTP, 6", 7", and 8" factory built chimneys.
4. Size the chimney in accordance with the appliance manufacturer's instructions.
5. When a firestop (FS), Attic Radiation Shield (AARS) or other shield component is installed, it is important to follow the framing dimensions for floor and roof openings as prescribed within this manual.
6. A chimney servicing a fireplace or an incinerator shall not serve any other appliance.
7. The chimney shall extend at least 3 ft above its point of contact with the roof and at least 2 ft higher than any wall, roof or adjacent building within 10 ft of it.
8. The maximum height of an unguided chimney above the roof is 5 ft. If the chimney extends more than 5 ft. above the roof, a Universal Roof Brace (XRSU) must be used.
9. The clearance between single wall pipe and unprotected combustible material must not be less than 18" (see National Building Code and NFPA 211) except: The distance between the vertical stove pipe and the ceiling may be less than 18" and will be established by the support.
10. Portions of the chimney which may extend through accessible spaces shall be enclosed in all cases to avoid personal contact with the chimney and damage to the chimney. Except for installation in single and two-story family dwellings, the enclosure must have a fire resistance rating equal to or greater than that of the floor or roof assemblies through which they pass.
11. Self-tapping stainless screws are not required, but may be used to reinforce the connection and avoid accidental unlocking of chimney lengths. Use only 1/2" self-tapping stainless screws. Do not penetrate the inner wall of the chimney.
12. When penetrating an exterior wall or ceiling/roof assembly, the vapor barrier must be repaired. This is easily accomplished by attaching the vapor barrier to the outer perimeter of any wall thimble, Firestop, or ceiling support component using approved sealant or tape, while also maintaining the minimum clearances-to-combustibles to the chimney's outer wall. When penetrating the building envelope, the gap between the outer layer of chimney and any Firestop or wall thimble can be sealed using high-temperature rated (316°C / 600°F) silicone caulking. Should you require further clarification, consult your local authority having jurisdiction.
13. Acceptance of the assembly is void if the installation instructions are not followed.
14. Provisions must be made to ensure all interior portions of the chimney be accessible for inspection and cleaning.
15. For chimneys enclosed in a chase, extending above the roof, the bottom of the Rain Cap must be at a minimum of 8" above top of a chase.



### WARNING

**The clearance between the chimney and combustible material must not be less than 2", except where established by the support. Unless directed otherwise in these instruction, do not fill this area with insulation.**

# 1

## GENERAL INSTALLATION NOTES (CONT'D)


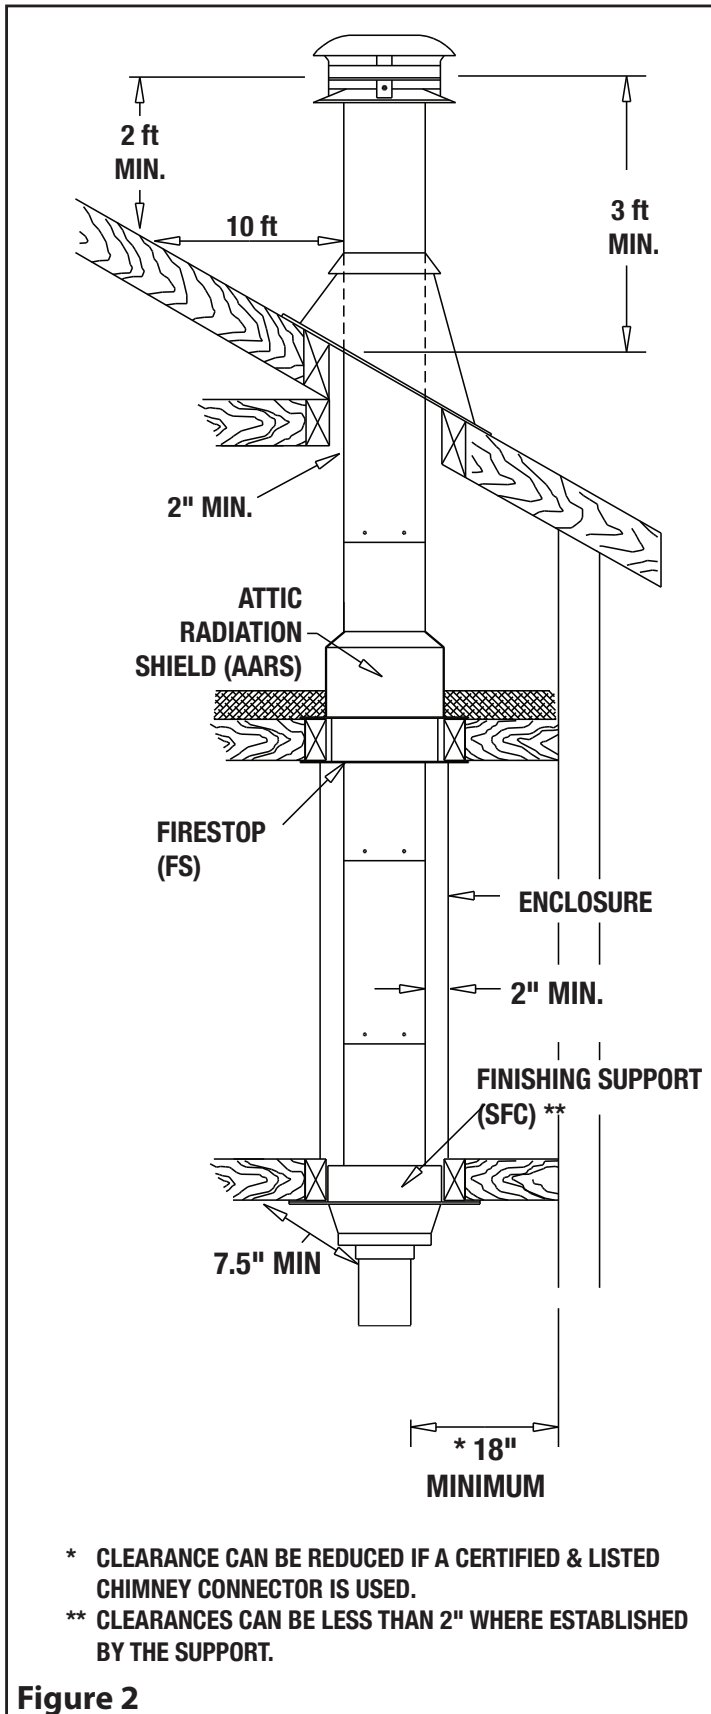


Figure 2

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

# 2

## INTERIOR STRAIGHT INSTALLATION - SINGLE FLOOR

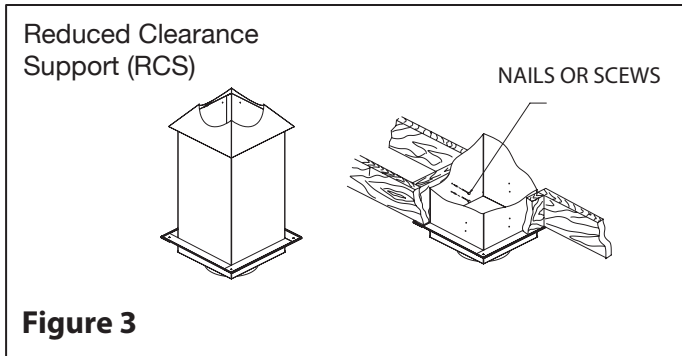

**Figure 3**

The Reduced Clearance Support (RCS) at the attic level, doubles as an attic radiation shield. The square-to-round collar (supplied) is used to close off the top of the support box. This prevents construction debris and attic insulation from falling within (see Figure 4).

**NOTE:** Where additional height is needed for the RCS, a support extension (SE) is available. See page 11.

**NOTE:** A Finishing Support (FSC) combined with an Attic Radiation Shield (AARS) can also be used for this application. Refer to page 8 for installation guide.


Step 1: Locate the chimney in a convenient place as near as possible to the appliance outlet.

Step 2: Cut and frame the openings in the ceiling and roof where the chimney will pass.

**NOTE:** It is important to follow the framing dimensions for the floor openings prescribed in this manual.

CHIMNEY SIZE	FRAMING DIMENSION	
	Reduce Clearance Support	ROOF OPENING
6"	12-1/8" x 12-1/8"	14" x 14"
7"	13-1/8" x 13-1/8"	15" x 15"
8"	14-1/8" x 14-1/8"	16" x 16"

**Table 3**

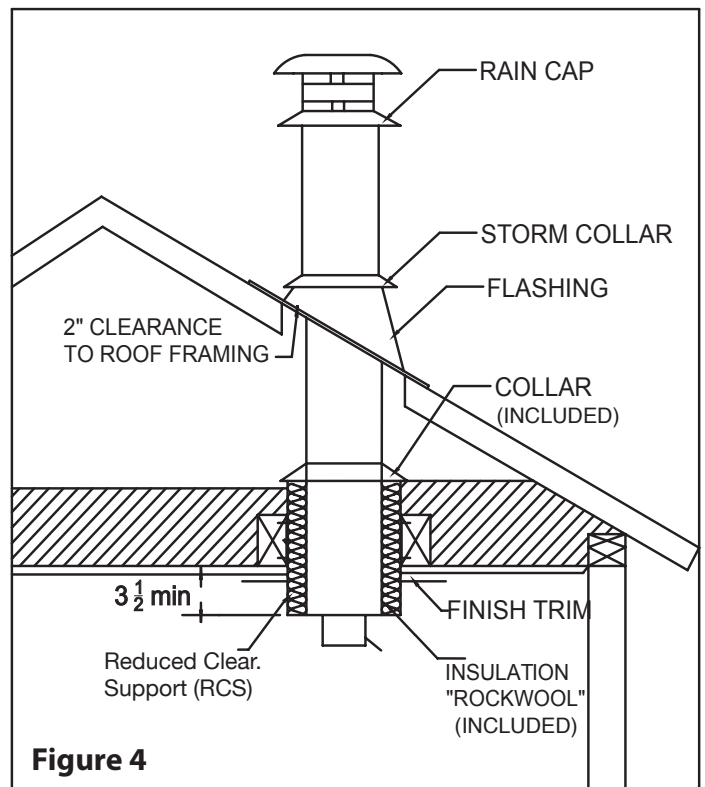

**Figure 4**

Step 3: From below push the square support into the framed opening making sure the square support extends a minimum of 3 1/2" below the finished ceiling. Attach the support to the framed box using (12) - 3" spiral nails or #8 x 1 1/2" wood screws (see Figure 3). Screw finish trim (included) to the ceiling.

Step 4: Wrap the insulation pad around the bottom of the first chimney length. Additional pieces of insulation can be loosely tucked down within corners. Do not compress insulation, this reduces effectiveness.

Step 5: Put this first chimney length in the support. Turn in clockwise to lock it in place.

**NOTE:** Make sure arrow on pipe label is pointing upward.

## 2

## INTERIOR STRAIGHT INSTALLATION - SINGLE FLOOR (CONT'D)

Step 6: Place the square-to-round collar around the chimney on top of the RCS support. Make sure it completely covers the top of the support. This will help to prevent construction debris or attic insulation from falling within the support.

Step 7: Stack the next chimney length on the first length. Be sure that the male and female threads are not in line when putting the lengths together. Turn the chimney clockwise to lock it in place. Continue until the required chimney height is reached. You may add a self tapping screw to prevent accidental unlocking.

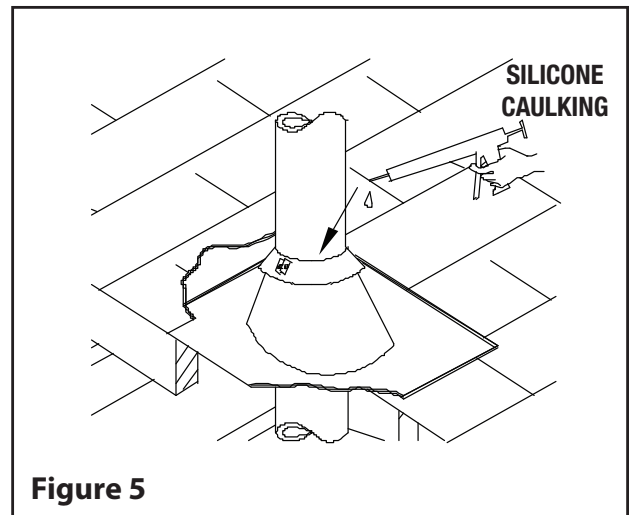


Figure 5

### Step 8: ROOF FLASHING INSTALLATION

Put the roof flashing in place. Seal the joint between the roof and the flashing with roofing compound. For sloping roofs, place the flashing under the upper shingles and on top of the lower shingles. Nail the flashing to the roof. Place the storm collar around the chimney and slide down on top of the flashing. Tighten it with the bolt supplied and make sure the joint is properly caulked (see Figure 5).

Step 9: Attach the rain cap to the top of the chimney.  
(see page 3, Cap removal/maintenance)

# 3

## INTERIOR STRAIGHT INSTALLATION - MULTIPLE FLOOR

Step 1. Locate the chimney in a convenient place as near as possible to the appliance outlet.

Step 2. Cut and frame the openings in the floor, ceiling and roof where the chimney will pass.  
(See Table 4)

**Note:** It is important to follow the framing dimensions for the floor openings prescribed in this manual.

	FRAMING DIMENSION	
CHIMNEY SIZE	FINISH SUPPORT (SFC)	RADIATION SHIELD & ROOF *
6"	14-3/8" x 14-3/8"	14" x 14"
7"	14-3/8" x 14-3/8"	15" x 15"
8"	14-3/8" x 14-3/8"	16" x 16"

**Table 4** \* For sloping roofs see size Table 2 on page 3

Step 3: From below push the support into the framed opening. Screw finish trim (included) to the ceiling. Attach the support to the framed box using (12) - 3" spiral nails or #8 x 1 1/2" wood screws (see Figure 6).

Step 4. Put the first chimney length in the support. Turn it clockwise to lock it in place (see Figure 7).

**NOTE:** Make sure arrow on pipe label is pointing upward.

Step 5. Install a Firestop Plate (FS) in each floor through which the chimney passes.

Step 6. Stack the next chimney length on the first length. Be sure that the male and female threads are not in line when putting the lengths together. Turn the chimney clockwise to lock it in place. You may add a 1/2" stainless steel self tapping screw to prevent accidental unlocking. Continue until the required chimney height is reached.

Step 7. At the attic level, install a Firestop (FS), from below and an Attic Radiation Shield (AARS) and Storm Collar from above (see Figure 8).

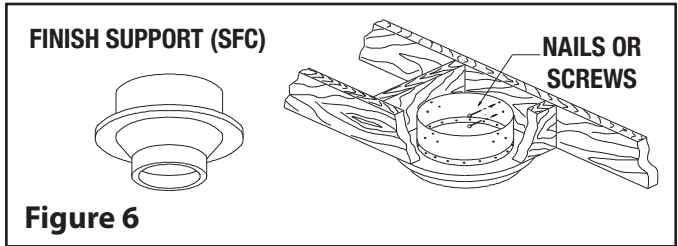


Figure 6

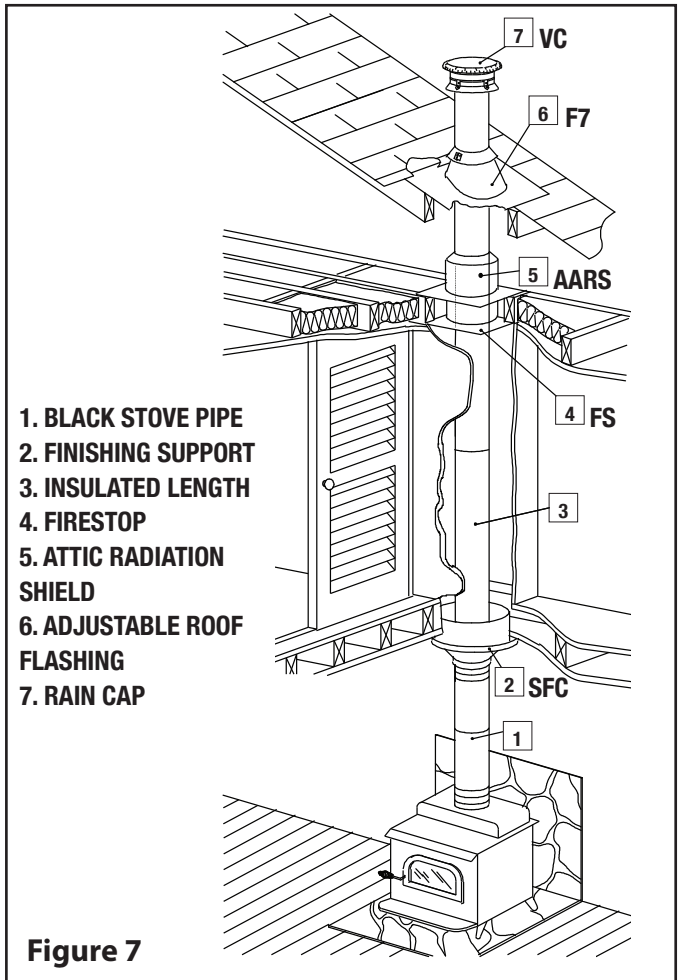


Figure 7





# 3

## INTERIOR STRAIGHT INSTALLATION - MULTIPLE FLOOR (CONT'D)

### Step 8. ROOF FLASHING INSTALLATION

Put the roof flashing in place. Seal the joint between the roof and the flashing with roofing compound. For sloping roofs, place the flashing under the upper shingles and on top of the lower shingles. Nail the flashing to the roof using roofing nails. Place the storm collar over the chimney and the flashing. Tighten it with the bolt supplied making sure the joint is properly caulked (see Figure 9).

Step 9. Attach the rain cap to the top of the chimney. (see page 3, Cap removal/maintenance)

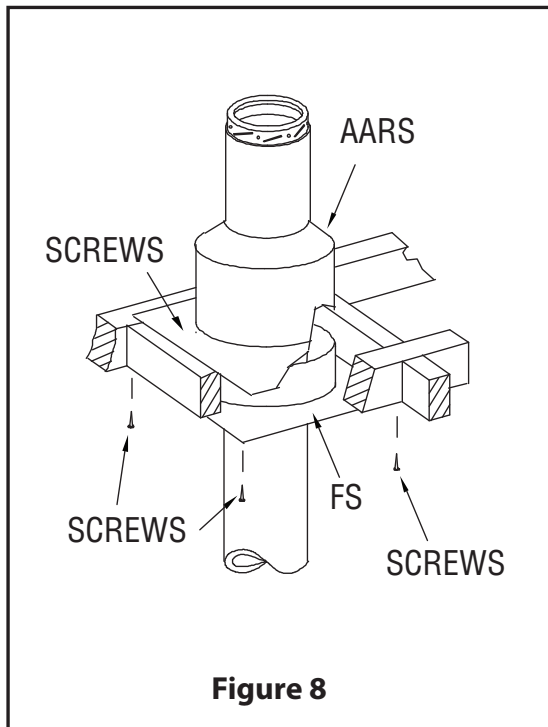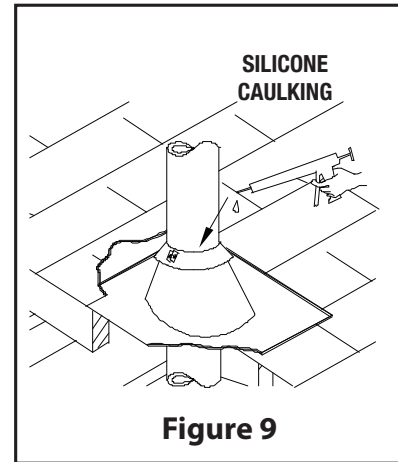


# 4

## INTERIOR INSTALLATION WITH CATHEDRAL CEILING

### SQUARE SUPPORT (CS24) REDUCED CLEARANCE SUPPORT (RCS)

**NOTE:** The Reduced Clearance Support comes with a collar. It can be discarded for this application.

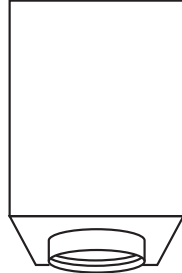

Step 1: Locate the chimney in a convenient location as near as possible to the appliance outlet. Cut and frame an opening in the roof for the support. The sides of this frame must be vertical.

**See Figure 11**

Step 2: From below, push the Support into the framed opening in the ceiling.


**NOTE:** The bottom portion of the support must project below the ceiling to ensure appropriate clearances to stovepipe. See Table 6.

Step 3: Using a level, make sure the support is vertical. If the support extends above the roof, cut it flush with the top of the roof. Nail the support to the framed opening using (12)-3" spiral nails or #8 x 1 1/2" wood screws.


**See Figure 10**

Step 4: Place first chimney length into the support. Twist to lock into place. Wrap the insulation pad (RCS) around the chimney, then slide it down within the support box. Make sure the insulation makes contact with the bottom of the support. Additional pieces of insulation can be loosely tucked down within corners. Do not compress insulation, this reduces effectiveness.

With a Square Support (CS24) or in steeper cathedral applications where an extra box length is required, additional insulation may

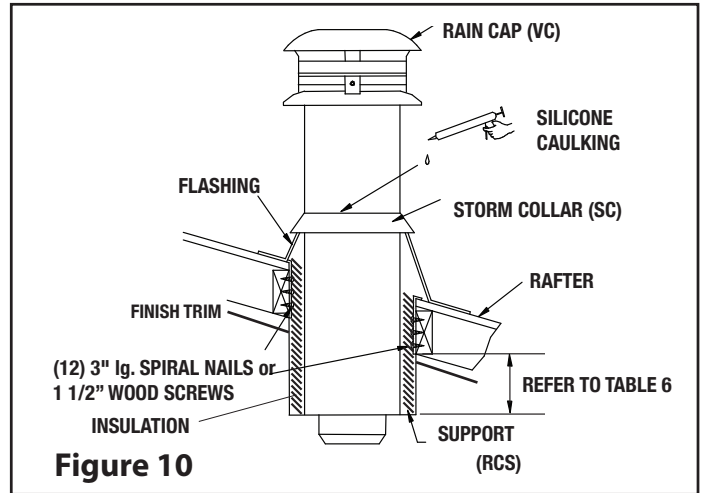

**Figure 10**

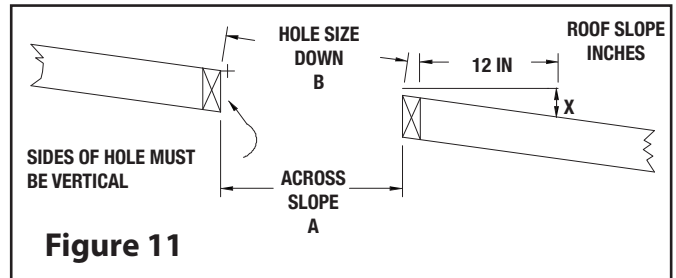

**Figure 11**

REDUCED CLEARANCE SUPPORT (RCS) FRAMED OPENING REQUIREMENT						
(Cathedral support (CS24) dimensions are the same for all diameters. Use 8" size reference for the frame opening)						
Chimney Size	6"		7"		8"	
Roof Slope	A	B	A	B	A	B
x/12						
0	12-1/8	12-1/8	13-1/8	13-1/8	14-1/8	14-1/8
2/12	12-1/8	12-1/4	13-1/8	13-1/4	14-1/8	14-3/8
4/12	12-1/8	12-3/4	13-1/8	13-7/8	14-1/8	14-7/8
6/12	12-1/8	13-1/2	13-1/8	14-5/8	14-1/8	15-7/8
8/12	12-1/8	14-1/2	13-1/8	15-3/4	14-1/8	16-7/8
10/12	12-1/8	15-7/8	13-1/8	17-1/8	14-1/8	18-1/2
12/12	12-1/8	17-1/8	13-1/8	18-1/2	14-1/8	20

**Table 5** NOTE: ALL DIMENSIONS ARE IN INCHES.

# 4

## INTERIOR INSTALLATION WITH CATHEDRAL CEILING (CONT'D)

be added to the support, and box extension. Approved insulation must be listed / compliant with ASTM E136/ULC S114 as Non-Combustible, have a melting temperature above 2000°F/1100°C, and be water resistant with low moisture absorption. Materials such as rockwool or mineral wool qualify.

### WARNING




Approval to include additional insulation around the chimney applies only within the Reduced Clearance Support and Square Support. DO NOT attempt to field-insulate around the pipe at any other location or within any other uninsulated component offered by DuraVent.

TO CONTINUE INSTALLATION  
REFER TO FLASHING INSTALLATION ON PAGE 6.

### SUPPORT EXTENSION (CSE24) REDUCE CLEARANCE SUPPORT EXTENSION (SE)

Steep pitched cathedral ceilings may require the use of a Support Extension. This piece fits down inside the Support and can be adjusted to increase the support's length by up to 22".

The extension is attached to the support using the eight metal screws provided. Be sure there is at least a **2" overlap** where the extension joins the support. *See Figure 12*

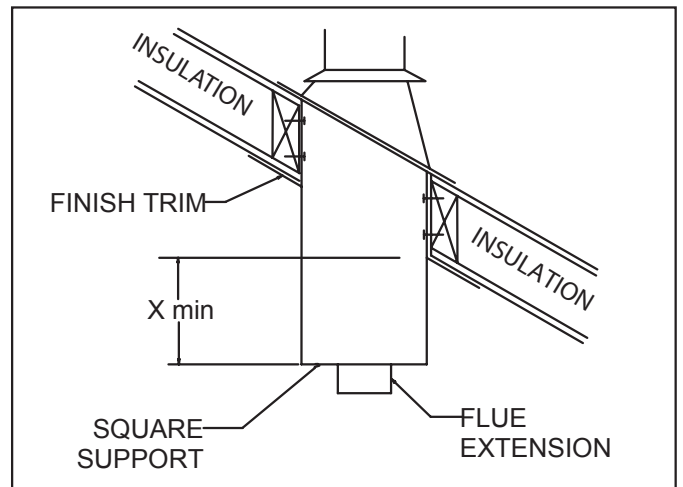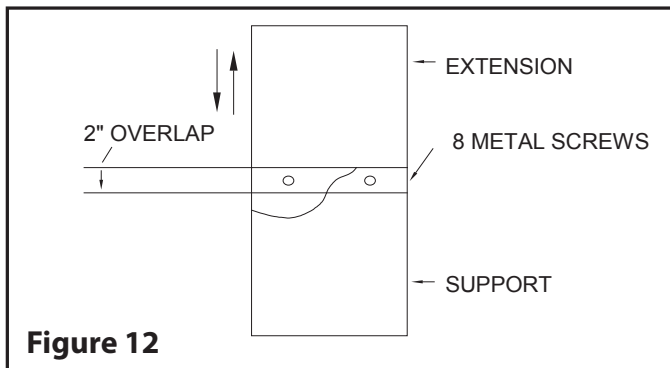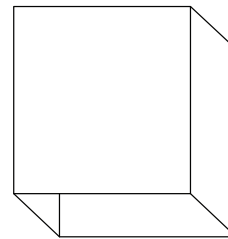

MINIMUM SUPPORT EXTENSION BELOW CEILING	
Slope	X
0/12 - 2/12	3 ½"
2/12 - 7/12	5 ½"
7/12 - 12/12	6 ¾"
12/12 - 24/12	7 ½"
24/12	12 ½"

Table 6

# 5

## OFFSET INSTALLATION

### OFFSET CHIMNEY


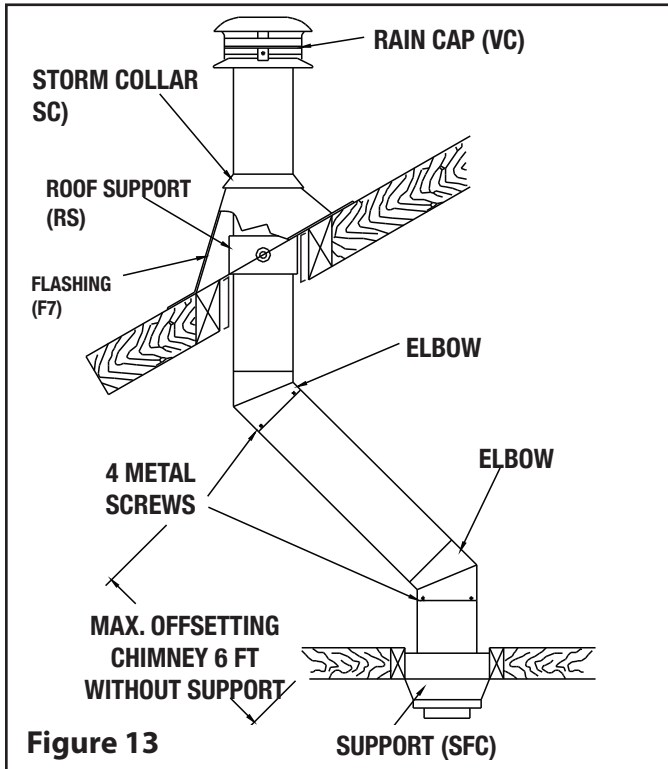


Figure 13

If it is necessary to offset the chimney to bypass an obstruction or to reposition chimney towards the ridge cap, do this by using 15°, 30°, or 45° insulated elbows. A maximum of two offsets (4 elbows in all) is allowed in a chimney.

The maximum length of unsupported offset chimney is 6'. If the offset chimney is longer than 6', then it must be supported at 6' intervals using an Offset Support (URES) or Wall Band (AWBU).

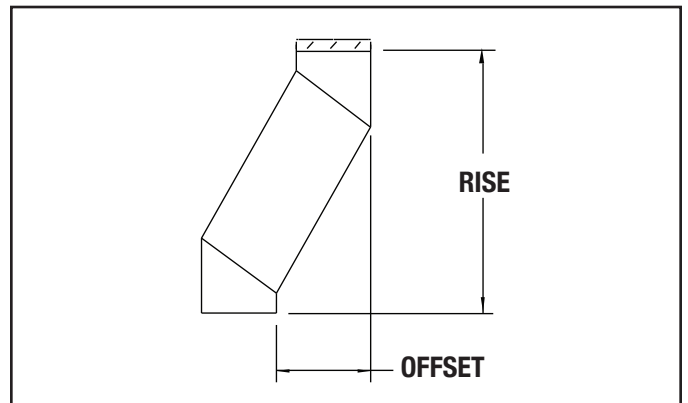

### OFFSET & RISE CHART MODEL DTP (6", 7", & 8")

ANGLE	DIA.	INCHES	ONE LENGTH BETWEEN ELBOWS					
			8	12	18	24	36	48
15°	6" - 8"	Offset	3-5/16	4-5/16	5-7/8	7-7/16	10-1/2	13-5/8
		Rise	16	19-7/8	25-11/16	31-1/2	43-1/16	54-5/8
30°	6" - 8"	Offset	7-3/8	9-3/8	12-3/8	15-3/8	21-3/8	27-3/8
		Rise	20-11/16	24-3/16	29-3/8	34-9/16	44-15/16	55-5/16
45°	6" - 8"	Offset	10-11/16	13-1/2	17-3/4	22	30-7/16	38-15/16
		Rise	18-7/16	21-1/4	25-1/2	29-3/4	38-1/4	46-3/4

ANGLE	DIA.	INCHES	TWO LENGTHS BETWEEN ELBOWS					
			8 & 48	12 & 48	18 & 48	24 & 48	36 & 48	48 & 48
15°	6" - 8"	Offset	15-1/2	16-1/2	18-1/16	19-5/8	22-3/4	25-13/16
		Rise	61-7/16	65-1/4	71-1/16	76-7/8	88-1/2	100-1/16
30°	6" - 8"	Offset	30-7/8	32-7/8	35-7/8	38-7/8	44-7/8	50-7/8
		Rise	61-3/8	64-7/8	70-1/16	75-1/4	85-5/8	96
45°	6" - 8"	Offset	44-5/8	47-7/16	51-11/16	55-15/16	64-3/8	72-7/8
		Rise	52-3/8	55-1/4	59-7/16	63-11/16	72-3/16	80-11/16

Note: All dimensions are in inches.

Table 7

# 5

## OFFSET INSTALLATION CONT'D

### WARNING

**A support must always be installed right above each offset (two elbows) to support the chimney above the offset.**

### INSTALLATION INSTRUCTIONS

Install the required support and the chimney as described in the support's installation instructions. When you reach the height at which the elbow will be installed, proceed as follows:

Step 1. Install the insulated offset elbow on the vertical chimney length. Turn it in the required direction and fasten it to the chimney with the (4) 1/2" metal screws provided.

Step 2. Place the required offset chimney length (see Table 7 below) on the elbow. Turn it clockwise to lock it in place.

Step 3. Use another elbow to turn the chimney vertically. Again secure the elbow to the chimney length using the (4) 1/2" metal screws provided.

Step 4. Install the remaining chimney as described in the instructions for the Roof Support.

### INSTALLATION CALCULATIONS

Determine the offset required in view of the obstacles that must be avoided (see Figure 13). Refer to Table 7 to determine the elbows required as well as the insulated length needed.

### ROOF SUPPORT (RS)

The Roof Support has three possible uses:

-It may be used to support a chimney from the roof. It adjusts to any roof pitch.

-It may be used on a floor, ceiling or roof above an offset to support the chimney above the offset.

-It may be used on a floor, ceiling or roof as a supplementary support when the chimney height exceeds that of the primary support.

### INSTALLATION INSTRUCTIONS


With the chimney extending through the hole in the roof, ceiling or floor and the radiation shield in place, proceed as follows:

Step 1. Assemble the support collar to fit your chimney diameter, as described on the instruction sheet supplied with the support.

Step 2. Slip the support down over the chimney length until its brackets rest on the roof or floor. Tighten the collar around the chimney.

Step 3. Center the chimney and nail or screw the support to the roof or floor using (8) - 2-1/2" nails or (8) N°. 8 - 1-1/4" wood screws.

Step 4. Install the remaining chimney lengths, until the required chimney height is reached.

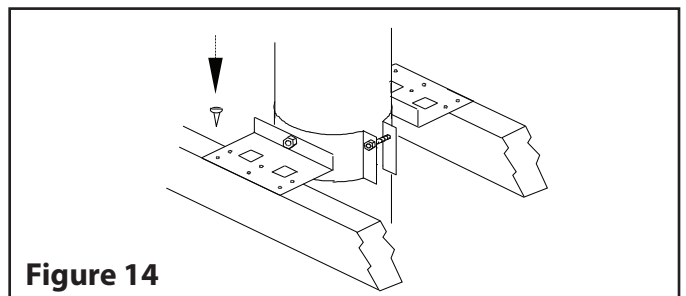


**Figure 14**

# 5

## OFFSET INSTALLATION (CONT'D)

### OFFSET/WALL SUPPORT (URES)

When a chimney is offset while traversing a wall, the Offset/Wall Support can provide necessary support. The maximum height of chimney that can be supported is shown within the Maximum Height/Loadbearing Capacity chart on page 3.

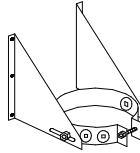

### INSTALLATION INSTRUCTIONS

Install the support as follows (Figure 15):

Step 1. Assemble the support collar to fit your chimney diameter.

Step 2. Slip the support down over the chimney to a proper location.

Step 3. Tighten the collar around the chimney.

Step 4. Attach the support brackets to the wall using (8) 3" nails or (8) N°10 x 1-1/4" wood screws.

**NOTE:** Be sure that the support attaches to a solid wall and not merely to dry wall or siding.

Step 5. Continue installing the chimney according to these installation instructions.

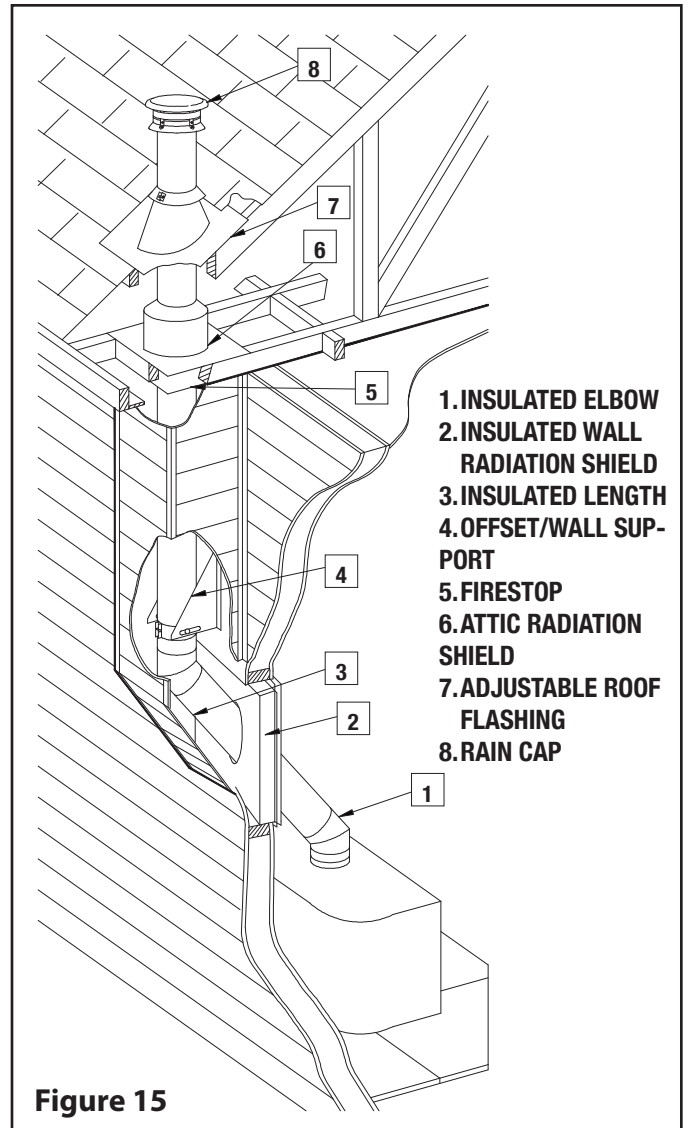


Figure 15

# 6

## EXTERIOR INSTALLATION


### TEE & WALL SUPPORT

Three wall supports are available. All three are adjustable (ATSC), (URES), and (ATS)

#### INSTALLATION NOTES

If possible, install an interior chimney as it will provide better performance than an exterior chimney. In areas with continuous temperatures below -18°C (0°F), the use of an exterior chimney may result in operating problems such as poor draft, excessive condensation of combustion products and rapid accumulation of creosote when connected to a wood burning appliance. If you do install an exterior chimney, we recommend that you surround the chimney within an insulated enclosure.

1. Maintain 2" clearance to combustible materials. Do not fill the 2" space around the chimney with insulation or any other material.
2. In exterior installations, the chimney must be stabilized at 8-foot intervals. A wall band (AWBU) or Offset Support (URES) can be used for this purpose.
3. The adjustable supports (ATSC) and (URES) can be installed either below or above the insulated tee.
4. **IMPORTANT:** To ensure minimum clearances to stovepipe, the insulated pipe length (passing through the wall) must project beyond the inside wall by a minimum of 5". The maximum projection length is 24". See Figure 16.
5. The distance between the stove pipe and a parallel combustible wall or ceiling must not be less than 18". The distance between the horizontal stove pipe and the unshielded vertical wall through which it passes must not be less than 7".
6. If an exterior installation is to be enclosed, (see Figure 20) allow for access to base of tee to facilitate required cleaning.

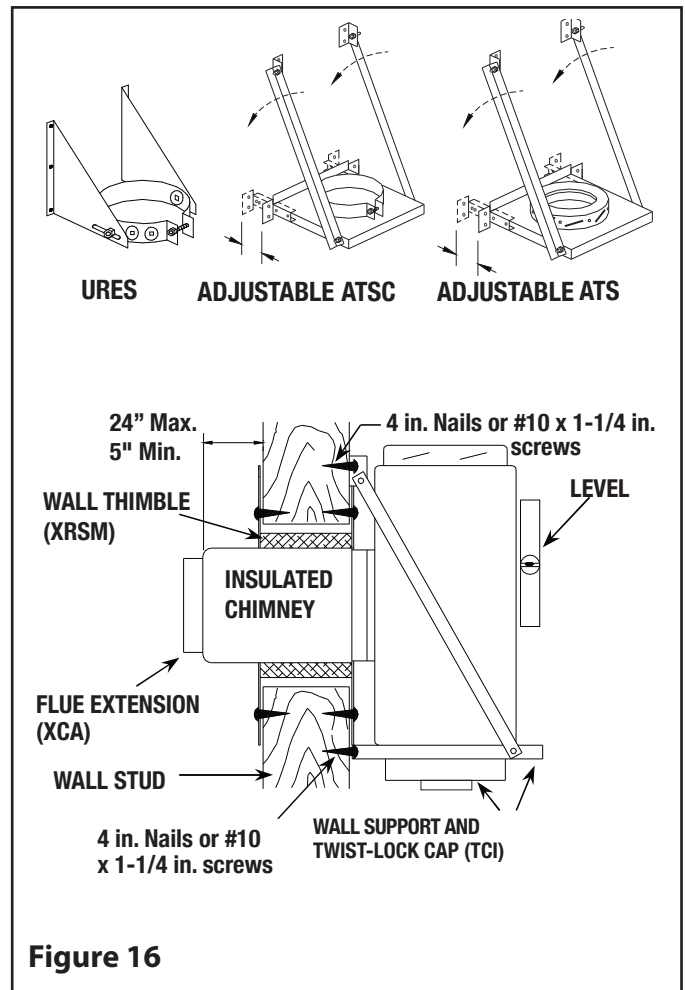

**Figure 16**

**Note:** If desired, a 1/2" stainless self-tapping screw can be used to fix the tee cap in place. Do not penetrate the inner wall of the chimney.

7. The minimum distance between the bottom of the Support or Tee and any horizontal combustible (including the ground) is 2".

# 6

## EXTERIOR INSTALLATION (CONT'D)

### INSTALLATION INSTRUCTIONS

Step 1. Determine where the chimney will pass through the wall.

- For concrete walls cut a hole slightly larger than the chimney.

**NOTE:** Wall thimble not required with concrete.

- For combustible walls cut and frame a hole 4" larger than the chimney, midway between the wall studs (see Table 8 below for sizing).

**See Figure 18**

Wall studs are typically placed at 16" centers. If the opening is perfectly centered, the studs on either side can be used to hang the tee support. This will ensure a strong attachment to the exterior wall.

CHIMNEY SIZE	FRAME OPENING	
	COMBUSTIBLE	CONCRETE
6"	14" x 14"	10-1/4"
7"	15" x 15"	11-1/4"
8"	16" x 16"	12-1/4"

**Table 8**

Step 2. Place the exterior half of the Wall Thimble (WTI) in the opening from the outside. Fasten in place using (4) 2" nails or 1" screws. This Wall Thimble is adjustable from 7" to 12". Cut the insulation pad (included) to match the wall thickness.

Step 3. Slide the interior half of the wall thimble inside the exterior half of the wall thimble.

Step 4. Use a level to ensure the wall thimble assembly is level, then fix the thimble in place using the screws provided (**see Figure 19**). For a wall requiring more than 12", a shield extension can be field fabricated using galvanized sheet metal 26 gauge minimum to cover the gap.

**NOTE:** The cavity surrounding the outer radiation shield and the wood frame must be filled with insulation (**see Figure 19**).

Step 5. Attach the clean out cap to the support or directly to tee bottom depending on configuration. (see Figures 16) The cap is in the box with the insulated tee.

Step 6. The minimum length of insulated chimney required to pass through the wall will be its total thickness plus 7". The insulated chimney must project at least 5" into the room beyond the finished wall. Attach horizontal chimney length to the tee's branch. Turn it clockwise to lock it in place. Seal the joint between the tee and horizontal length using the supplied length of foil-faced tape. Place the insulated tee on the support with horizontal chimney length positioned through the wall.

**NOTE:** The supports (ATSC) or (URES) can be installed above the tee. **See Figure 17.**

Step 7. This step will require 2 people: (See Figure 16).

Insert the chimney length of this tee-support assembly into the frame opening in the wall. Using a level, ensure the tee is vertical, then attach the support to the wall using (8) N<sup>o</sup>. 10 x 1 - 1/4" wood screws or 4" spiral nails.

**NOTE:** To provide sufficient strength, the nails must be driven into the wall studs. For concrete walls, the support should be attached using (8) 1/4" x 2" lag bolts.

Step 8. From inside, attach the flue extension (CA) to the horizontal chimney length (**see Figure 16**).



# 6

## EXTERIOR INSTALLATION (CONT'D)

Step 9. If the chimney must pass through a soffit overhang above, cut and frame an opening according to the Roof Opening Chart shown in Figure 1. Important: Do not cut a truss!

If desired, a firestop can be used to enclose the underside of the soffit. If using this part, be sure to follow the recommended framing requirements shown in Table 1 on page 3.

**WARNING:** The clearance between the chimney and combustible material must not be less than 2". Do not fill required air space in this area with insulation.




Step 10. Stack a chimney length on top of the tee. Turn it clockwise to lock it in place.


Step 11. Stack the next chimney length on the first length. Continue until the required chimney height is reached.

**NOTE:** In exterior installations, the chimney must be stabilized at 8-foot intervals. A wall band (AWBU) or Offset Support (URES) can be used for this purpose.

### TO CONTINUE INSTALLATION

SEE ROOF FLASHING INSTALLATION, on page 7.

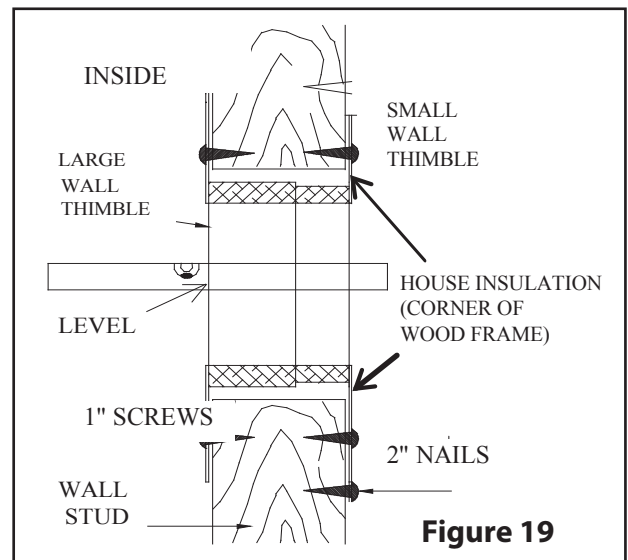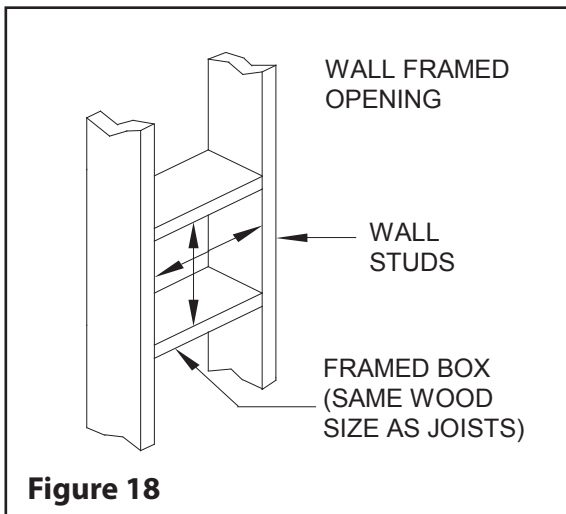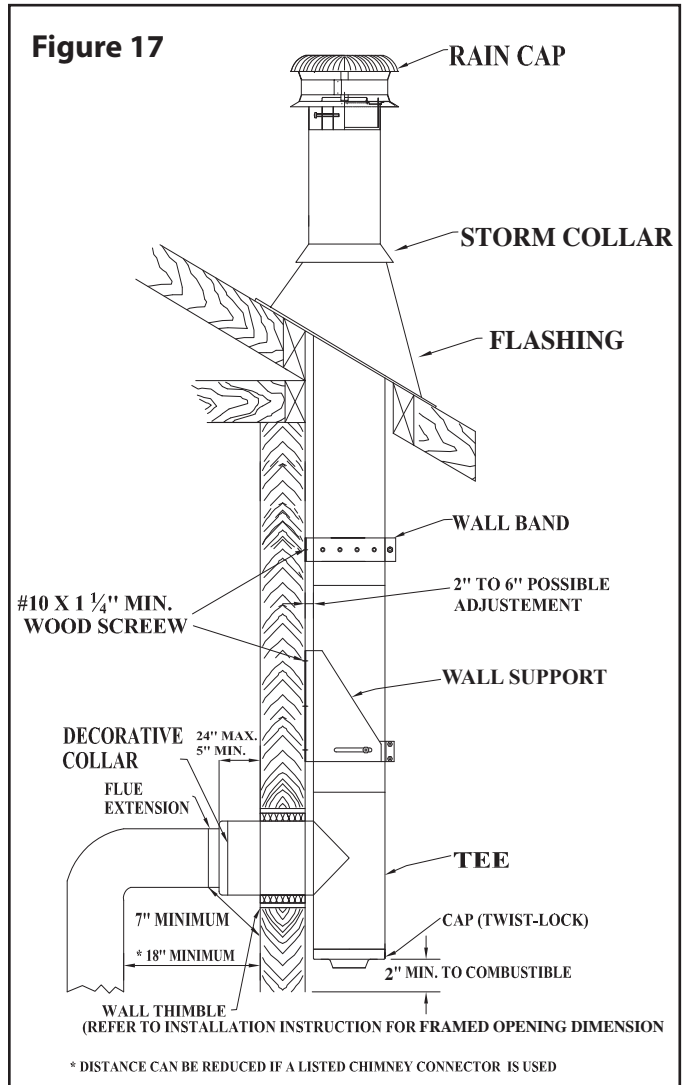

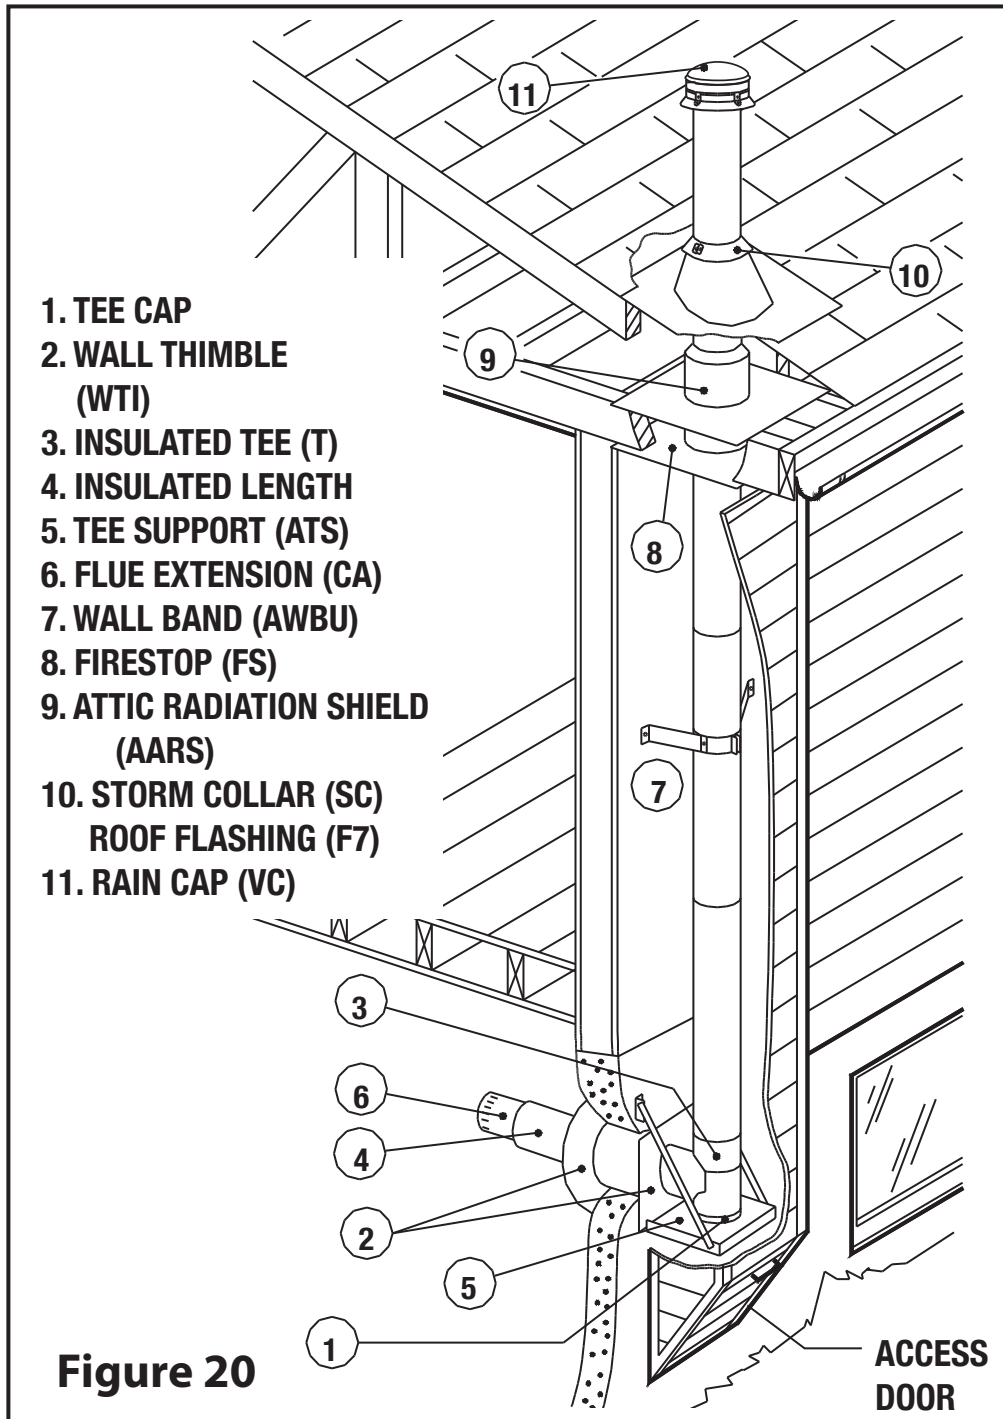


# 7

## SPECIALIZED COMPONENTS

### ANCHOR PLATE (AP)

The anchor plate is used on factory-built fireplaces, site-built fireplaces, and other appliances to provide a positive connection for the chimney.

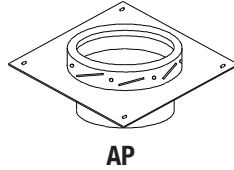

### INSTALLATION INSTRUCTIONS

Twist-lock the first length of chimney onto the anchor plate. From here, refer to page 8. Starting with steps 5, follow the same instructions as shown.

### FACTORY-BUILT FIREPLACES

For chimneys installed on factory-built fireplaces, follow the installation instructions accompanying the fireplace.

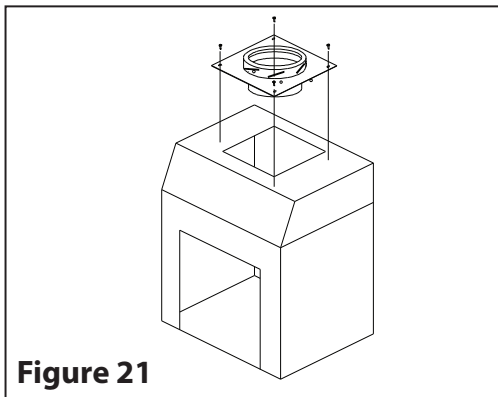


Figure 21

### FIREPLACE INSULATED RADIATION SHIELDS

These are used only with wood-burning fireplaces which have been certified for use with DTP.

### ANGLED INSULATED RADIATION SHIELD (WRSI30)

It has been designed for use when a chimney passes through a wall at an angle. **See Table 9**

Ø INT.	FRAMING SIZE	
	WRSI30	
	7"	8"
A	41-1/4	43-5/16
B	18-3/8	19-3/8
C	36-3/4	38-13/16
D	13-7/8	14-7/8
E	3	3

Table 9

Note: All dimensions are in inches.

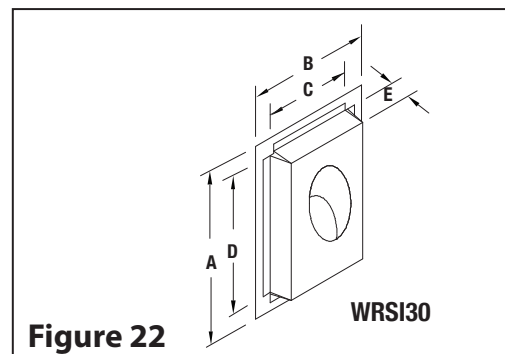


Figure 22



## DuraVent Limited Lifetime Warranty

DuraVent, Inc. provides this limited lifetime warranty for all of its products with the exception of Ventinox® (lifetime), and PolyPro® (ten years). Subject to the limitations set forth below, DuraVent warrants that its products will be free from defects in material or manufacturing, if properly installed, maintained and used. DuraVent products are fully warranted if installed only by a professional installer. This Warranty is transferable from the original homeowner to the buyer of the home. This warranty does not cover normal wear and tear, smoke damage or damage caused by chimney fires, acts of God, or any product that was: (1) purchased other than from an authorized DuraVent dealer, retailer or distributor; (2) modified or altered; (3) improperly serviced, inspected or cleaned; or (4) subject to negligence or any use not in accordance with the installation instructions included with the product as determined by DuraVent. Installation instructions are available online at [www.duravent.com](http://www.duravent.com) under Support/Literature and through our Customer Service Department 800-835-4429 or [customerservice@duravent.com](mailto:customerservice@duravent.com). This limited lifetime warranty applies only to parts manufactured by DuraVent.

DuraVent provides the following warranties for its products: One Hundred Percent (100%) MSRP 15 years from the date of purchase, and Fifty Percent (50%) thereafter, except for the following limitations on: all Termination Caps and DuraBlack® are warranted at One Hundred Percent (100%) for five years.

All warranty obligations of DuraVent shall be limited to repair or replacement of the defective product pursuant to the terms and conditions applicable to each product line. These remedies shall constitute DuraVent's sole obligation and sole remedy under this warranty. This warranty provides no cash surrender value. The terms and conditions of this warranty may not be modified, altered or waived by any action, inaction or representation, whether oral or in writing, except upon the express, written authority of an executive officer of DuraVent.

Corn, bio-fuels, driftwood or other wood containing salt, preservative-treated lumber, plastic and household trash or garbage, or wood pellets containing such materials must not be burned in the appliance or fireplace. In case of a chimney fire, the chimney must be inspected and approved by a certified Chimney Sweep before reuse. After each annual inspection, maintenance, and cleaning, the certified Chimney Sweep must fill out and date the appropriate section of the warranty card provided with the chimney liner.

LIMITATIONS ON INTERNET SALES: Notwithstanding any other terms or conditions of this Limited Lifetime Warranty, DuraVent provides no warranty for the following specific products if such products are not installed by a qualified professional installer: DuraTech®, DuraTech® HTC, DuraTech® Premium, DuraChimney® II, PelletVent Pro®, DirectVent Pro®, FasNSeal®, FasNSeal® W2, FasNSeal® Flex,

and PolyPro®, and DuraVent's relining products including DuraLiner®, DuraFlex® (SW, Pro, 316, 304), and Ventinox®. For purposes of this warranty, a trained professional installer is defined as one of the following: licensed contractors with prior chimney installation experience, CSIA Certified Chimney Sweeps, NFI Certified Specialists, or WETT Certified Professionals.

DuraVent must be notified and given the opportunity to inspect defective product prior to replacement under the terms of this limited lifetime warranty. All warranty claims must be submitted with proof of purchase. Labor and installation costs are not covered under this warranty. To obtain warranty service contact: DuraVent Warranty Service, 877 Cotting Ct., Vacaville CA 95688, or call 800-835-4429.

WHERE LAWFUL, DURAVENT DISCLAIMS ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL DURAVENT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES OR DIRECT OR INDIRECT LOSS OF ANY KIND, INCLUDING BUT NOT LIMITED TO PROPERTY DAMAGE AND PERSONAL INJURY. DURAVENT'S ENTIRE LIABILITY IS LIMITED TO THE PURCHASE PRICE OF THIS PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

For the most up-to-date installation instructions, see [www.duravent.com](http://www.duravent.com)

REV 11.28.17

Manufactured in Vacaville CA

## WARRANTY

This product has a limited lifetime warranty. Please read the warranty to be familiar with its coverage.

Retain this manual. File it with your other documents for future reference.

## PRODUCT REFERENCE INFORMATION

Please contact DuraVent for the phone number of your nearest DuraVent dealer who will answer your questions or address your concerns.

Normally, all parts should be ordered through your DuraVent distributor or dealer. Parts will be shipped at prevailing prices at time of order.

When ordering repair parts, always give the following information:

1. The model number of the vent system.
2. The part number.
3. The description of the part.
4. The quantity required.
5. The installation date of the chimney system.

If you encounter any problems or have any questions concerning the installation or application of this system, please contact your dealer.

### **DuraVent**

877 Cotting Court, Vacaville, CA 95688

800-835-4429

Visit us at [www.Duravent.com](http://www.Duravent.com)

# DuraVent®

877 Cotting Court, Vacaville, CA 95688

800-835-4429; [www.DuraVent.com](http://www.DuraVent.com)

---

DuraVent reserves the right to make changes at any time, without notice,  
in design, materials, specifications, prices.

Consult your local distributor for chimney system code information.

Printed in Canada © 2010, 2017

PIDURAPREMIUM REV.2 01/19/2021